

COMMUNICATION TECHNOLOGIES, INC.
 6213 MIDDLETON SPRINGS DRIVE
 MIDDLETON, WISCONSIN 53562

VOICE: 800-818-1511 or 608-831-4636

FAX 608-836-1840

E-mail: CTI@CTIInfo.com

CONTROL SOFTWARE FOR CTI-850 SATELLITE ANTENNA CONTROLLER MENU STRUCTURE

MAIN MENU			ANTENNA MENU			DISK DRIVE MENU			TEST MENU			CONFIGURATION MENU		
ENTRY	DESCRIPTION	REF	ENTRY	DESCRIPTION	REF	ENTRY	DESCRIPTION	REF	ENTRY	DESCRIPTION	REF	ENTRY	DESCRIPTION	REF
<HLP>	Display MAIN MENU	10.3	<HLP>	Display ANTENNA MENU	10.3	<HLP>	Display DISK DRIVE MENU	10.3	<HLP>	Display TEST MENU	10.3	<HLP>	Display CONFIG MENU	10.3
<0>	Move to Calibrated Position <1> - <500>	10.3	<1>	Move Antenna Manually	11.1	<1>			<1>	Display current counts	13.1	<1>	Configure Display	14.1
<2>			<2>	Calibrate Antenna Position	11.2	<2>	Read Disk Directory	12.1	<2>	Display Site Coordinates	13.2	<2>	Set Site Coordinates	14.2
<3>			<3>	Direct entry in Degrees	11.3	<3>	Run Program from Disk	12.2	<3>	Display Encoder Configuration	13.3	<3>	Set Encoder Parameters	14.3
<4>			<4>	Display Current Position	11.4	<4>	Save Hardware Image to Disk	12.3	<4>	Display Reference Satellite	13.4	<4>	Establish Reference Satellite	14.4
<5>			<5>	Display Position Number	11.5	<5>	Load Hardware Image from Disk	12.4	<5>	Display Soft Limits	13.5	<5>	Modify Soft Limits	14.7
<6>			<6>	Display All Calibrated Positions	11.6	<6>	Print Positions to Disk	12.5	<6>	Display Position Number	13.6	<6>	Clear Reference Satellite	14.8
<7>			<7>	Delete Position Number XXX	11.7	<7>			<7>	Display All Cal Position Counts	13.7	<7>	Set Auto-Jog Information	14.9
<8>			<8>	Delete All Calibrated Positions	11.8	<8>			<8>	Display Antenna Information	13.8	<8>	Set Antenna Information	14.10
<9>			<9>			<9>		Display Remote Configuration	13.9	<9>	Configure Remote Port	14.11		
<HNU>	Go to ANTENNA MENU	10.3	<HNU>	Go to DISK DRIVE MENU	10.3	<HNU>	Go to TEST MENU	10.3	<HNU>	Go to CONFIG MENU	10.3	<HNU>	Return to MAIN MENU	10.3
<ENT>	Light backlight; alter display.	10.3	<ENT>	Return to MAIN MENU	10.3	<ENT>	Return to MAIN MENU	10.3	<ENT>	Return to MAIN MENU	10.3	<ENT>	Return to MAIN MENU	10.3
<ESC>	No action		<ESC>	Return to MAIN MENU	10.3	<ESC>	Return to MAIN MENU	10.3	<ESC>	Return to MAIN MENU	10.3	<ESC>	Return to MAIN MENU	10.3

COMMUNICATION TECHNOLOGIES, INC.
 6213 MIDDLETON SPRINGS DRIVE
 MIDDLETON, WISCONSIN 53562

VOICE: 800-818-1511 or 608-831-4636

FAX 608-836-1840

E-mail: CTI@CTIinfo.com

COMTRACK SOFTWARE FOR CTI-850 SATELLITE ANTENNA CONTROLLER MENU STRUCTURE

MAIN MENU			ANTENNA MENU			DISK DRIVE MENU			TEST MENU			CONFIGURATION MENU			TRACKING MENU		
ENTRY	DESCRIPTION	REF	ENTRY	DESCRIPTION	REF	ENTRY	DESCRIPTION	REF	ENTRY	DESCRIPTION	REF	ENTRY	DESCRIPTION	REF	ENTRY	DESCRIPTION	REF
<HLP>	Display MAIN MENU	10.3	<HLP>	Display ANTENNA MENU	10.3	<HLP>	Display DISK DRIVE MENU	10.3	<HLP>	Display TEST MENU	10.3	<HLP>	Display CONFIG MENU	10.3	<HLP>	Display TRACKING MENU	10.3
<0>	Move to Calibrated Position <1> - <500>	10.3	<1>	Move Antenna Manually	11.1	<1>			<1>	Display current counts	13.1	<1>	Configure Display	14.1	<1>	Begin Tracking	18.2
<2>			<2>	Calibrate Antenna Position	11.2	<2>	Read Disk Directory	12.1	<2>	Display Site Coordinates	13.2	<2>	Set Site Coordinates	14.2	<2>	Halt Tracking	18.3
<3>			<3>	Direct entry in Degrees	11.3	<3>	Run Program from Disk	12.2	<3>	Display Encoder Configuration	13.3	<3>	Set Encoder Parameters	14.3	<3>	Monitor Tracking	18.4
<4>			<4>	Display Current Position	11.4	<4>	Save Hardware Image to Disk	12.3	<4>	Display Reference Satellite	13.4	<4>	Establish Reference Satellite	14.4	<4>	Select Tracking Type	18.5
<5>			<5>	Display Position Number	11.5	<5>	Load Hardware Image from Disk	12.4	<5>	Display Soft Limits	13.5	<5>	Modify Soft Limits	14.7	<5>	Set Increment Sizes	18.6
<6>			<6>	Display All Calibrated Positions	11.6	<6>	Print Positions to Disk	12.5	<6>	Display Position Number	13.6	<6>	Clear Reference Satellite	14.8	<6>	Set Date and Time	18.7
<7>			<7>	Delete Position Number XXX	11.7	<7>			<7>	Display All Cal Position Counts	13.7	<7>	Set Auto-jog Information	14.9	<7>	Change AGC Threshold	18.8
<8>			<8>	Delete All Calibrated Positions	11.8	<8>			<8>	Display Antenna Information	13.8	<8>	Set Antenna Information	14.10	<8>		
<9>			<9>			<9>			<9>	Display Remote Configuration	13.9	<9>	Configure Remote Port	14.11	<9>		
<HNU>	Go to ANTENNA MENU	10.3	<HNU>	Go to DISK DRIVE MENU	10.3	<HNU>	Go to TEST MENU	10.3	<HNU>	Go to CONFIG MENU	10.3	<HNU>	Go to TRACKING MENU	10.3	<HNU>	Return to MAIN MENU	10.3
<ENT>	Light backlight; after display.	10.3	<ENT>	Return to MAIN MENU	10.3	<ENT>	Return to MAIN MENU	10.3	<ENT>	Return to MAIN MENU	10.3	<ENT>	Return to MAIN MENU	10.3	<ENT>	Return to MAIN MENU	10.3
<ESC>	No action		<ESC>	Return to MAIN MENU	10.3	<ESC>	Return to MAIN MENU	10.3	<ESC>	Return to MAIN MENU	10.3	<ESC>	Return to MAIN MENU	10.3	<ESC>	Return to MAIN MENU	10.3